


Application Instructions for Custom Heat Transfers (Version 2.0) (10/08-5a)

Press Settings

295-315 Degrees
10 Seconds
Medium to Heavy Pressure

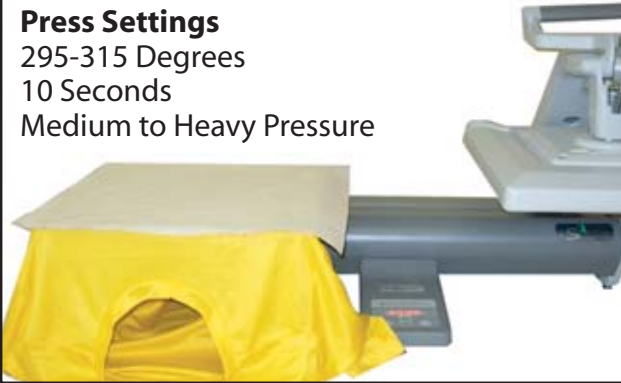

Step #1

Cover your garment with Teflon or Wax Paper and preheat for about 3 seconds.



Step #2

Position the transfer on the garment facing up and cover with Teflon sheet.



Step #3

Press the garment for 8-10 seconds.



Step #4

Remove the clear application tape.
(See Note Below)



Step #5

Cover with the Teflon again and press for about 3 seconds.



Step #4 Note

The application tape is designed to remove itself on the Teflon as shown to the right. If it does not, peel like the image on the left. A piece of masking tape can be used to avoid the heat from the lower platten.

